

APPLICATION GUIDE



1

PREP

Start out by masking off the area that you will be painting with painter's tape. Then simply sand the selected areas flat. Clean with de-greasing soap and mask-off the area before applying KiwiGrip.



2

APPLY

Apply and spread KiwiGrip onto the prepped surface. KiwiGrip can even be applied on top of other non-skid surfaces.




3

ROLL

Use the roller to achieve the texture you desire. For more aggressive non-skid allow coating to dry slightly then lightly roll again.

KIWIGRIP APPLICATION & DRYING WINDOW

Maintain deck and ambient conditions as shown in each zone before allowing KiwiGrip to get wet.

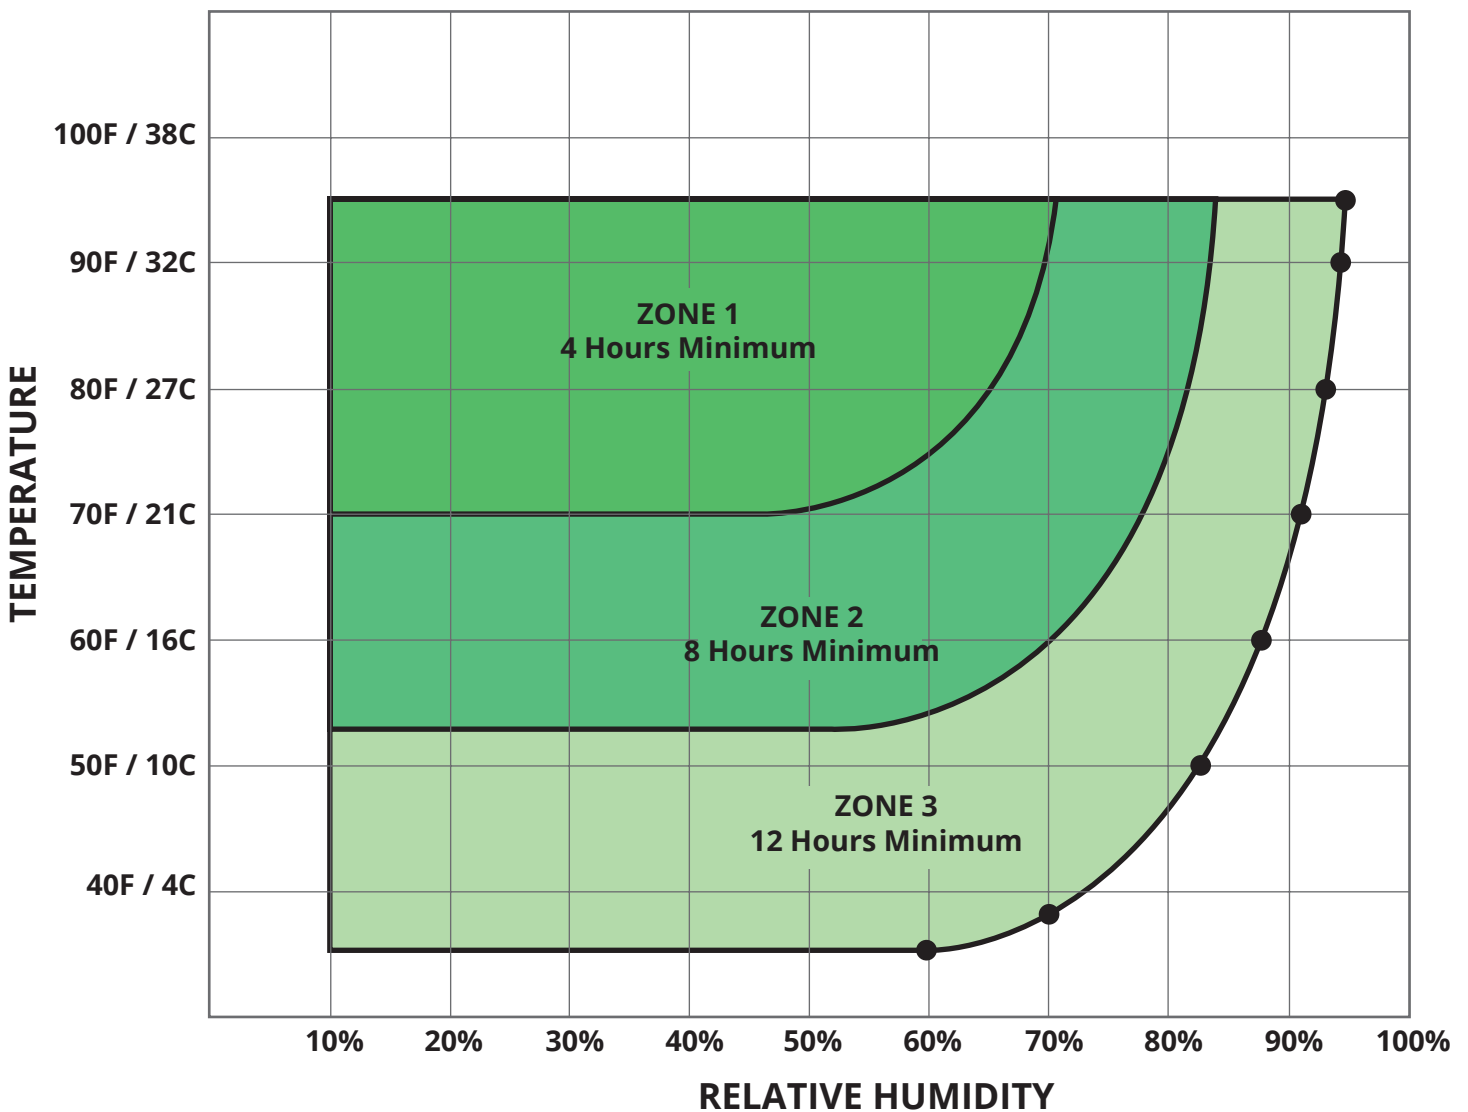

1. Do not apply KiwiGrip if conditions are expected to fall outside application window before KiwiGrip is fully dry.
2. Application in direct sunlight and in hot conditions significantly reduce tack time. (Add up to 10% water to extend tack time).
3. Drying time in cold conditions is significantly extended. (Moving air from a fan or breeze will shorten drying time).